

\*<u>CAUTION</u>\* Any check valve in line or in cooler <u>must</u> be by-passed or removed while flushing. Failure to do so will cause check valve to stick and transmission to fail.